


IN-DASH STEREO INSTALLATION KIT FOR 2009-UP TOYOTA VENZA

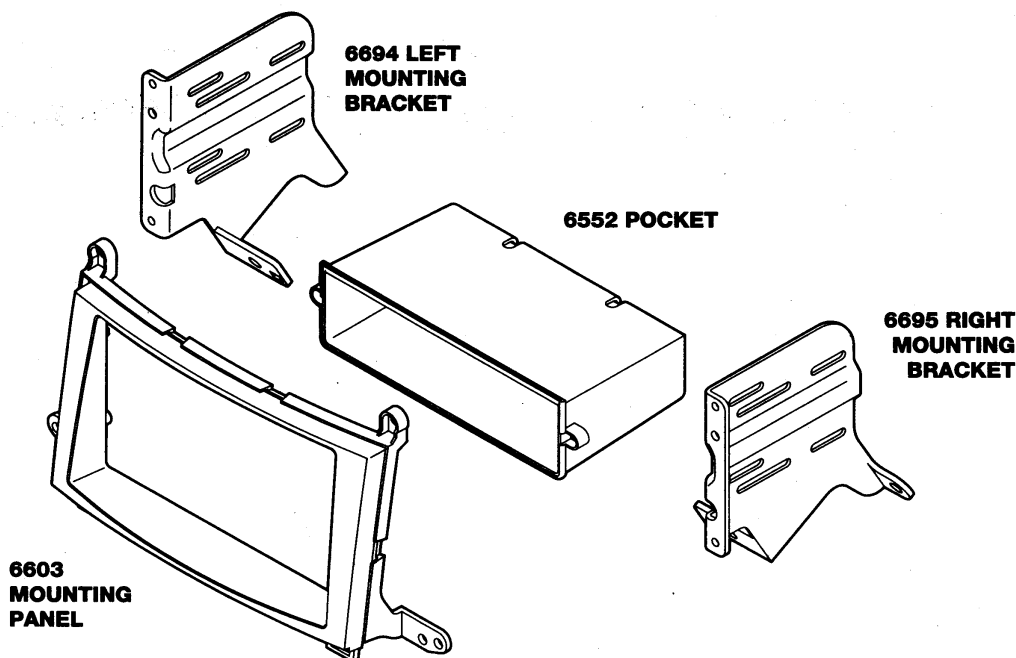

INTRODUCTION/PRELIMINARY

This premium installation kit is for 2009-UP Toyota Venza vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION

DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

FACTORY WIRING CODES

For Factory Wiring Codes go to: **www.scosche-cars.com**

CAR STEREO CONNECTORS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

TA02B

1987-Up
Toyota

TA07SR

2003 -Up Toyota Replacement
Interface for JBL systems

TA02B



TA07SR



LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (TA2104B) in 2009-UP Toyota Venza vehicles. Scosche Industries, Inc. cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

FACTORY STEREO REMOVAL


2009-UP TOYOTA VENZA

1. Unsnap and remove the panel below the A/C controls
2. Unscrew and remove the A/C controls
3. Remove the (4) factory screws from the factory stereo and remove the factory stereo. **Note:** You will need a swivel-head socket to remove the lower left screw.
4. Remove the (4) screws that attach the vents to the stereo, and remove the vents.

MOUNTING THE STEREO

SINGLE DIN MOUNT

1. Attach the 6552 pocket to the 6693 mounting panel using the screws provided with the kit.
2. Attach the 6694 and 6695 brackets to the 6693 mounting panel using the screws provided with the kit.
3. Align and attach the single din stereo to the brackets using the screws supplied with the stereo.
4. Attach the vents to the 6693 panel using the factory screws.

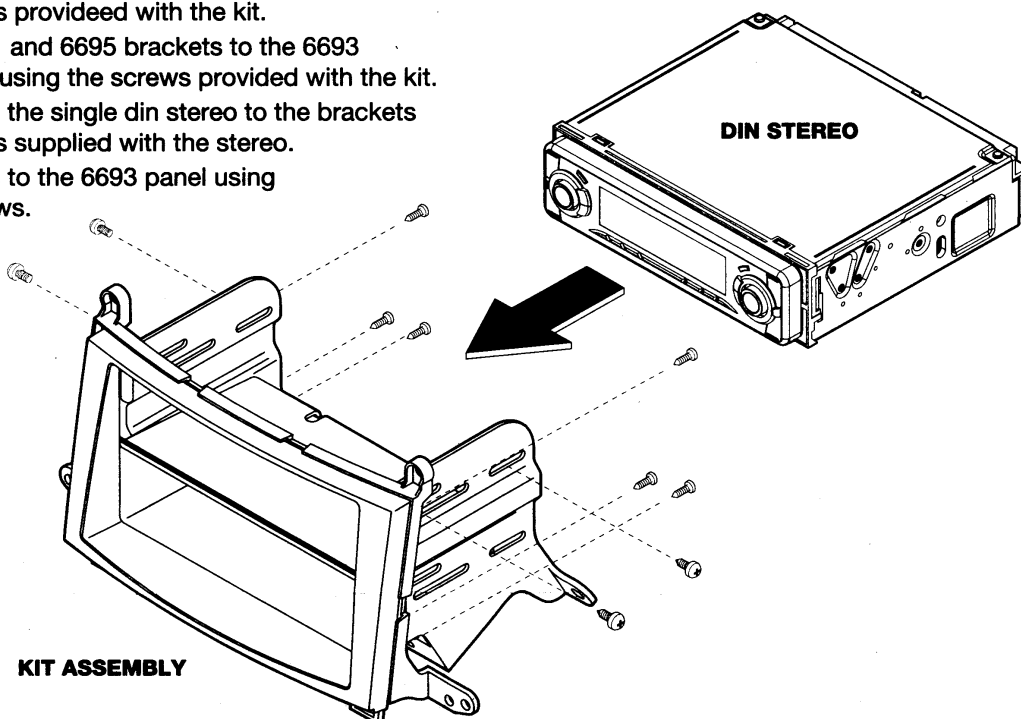

DOUBLE DIN MOUNT

1. Attach the 6694 and 6695 brackets to the 6693 mounting panel using the screws provided with the kit.
2. Align and attach the double din stereo to the brackets using the screws supplied with the stereo.
3. Attach the vents to the 6693 panel using the factory screws.

