


IN-DASH INSTALLATION KIT FOR 2005-UP TOYOTA TACOMA

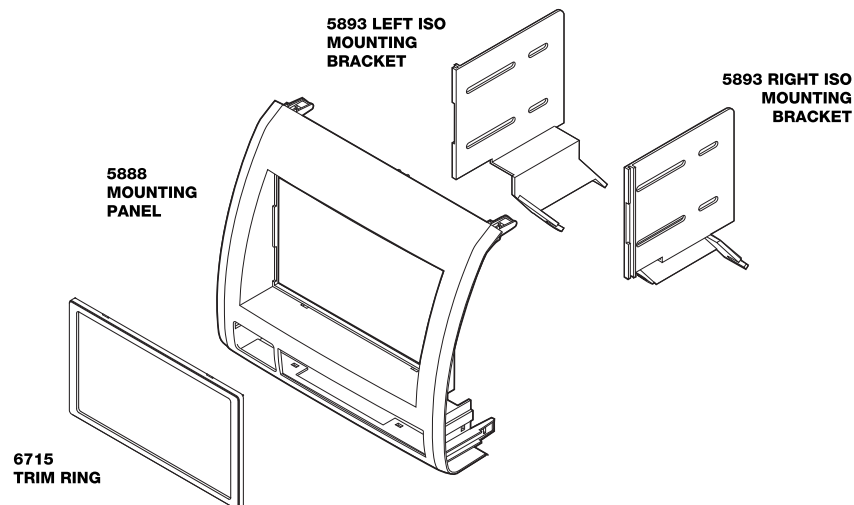

INTRODUCTION/PRELIMINARY

This premium installation kit is for 2005-Up Toyota Tacoma vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION

DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

FACTORY WIRING CODES


For Factory Wiring Codes go to: www.scosche-cars.com

CAR STEREO CONNECTORS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

TA02B

1987-Up Toyota

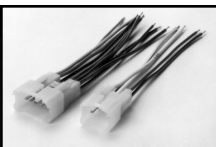

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (TA2053B/TA2053S9B) in 2005-Up Toyota Tacoma vehicles. Scosche Industries, Inc. cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

FACTORY STEREO REMOVAL


2005-UP TOYOTA TACOMA

1. Using a panel removal tool, carefully pry out the A/C controls.
2. Remove (4) 10mm bolts securing the radio to the dash. Disconnect and remove.

MOUNTING THE STEREO

A. ATTACHING THE ISO BRACKETS (DOUBLE DIN INSTALLATION)

1. Slide 5893 LEFT and RIGHT ISO brackets onto sides of 5888 kit panel radio opening until they snap into place.

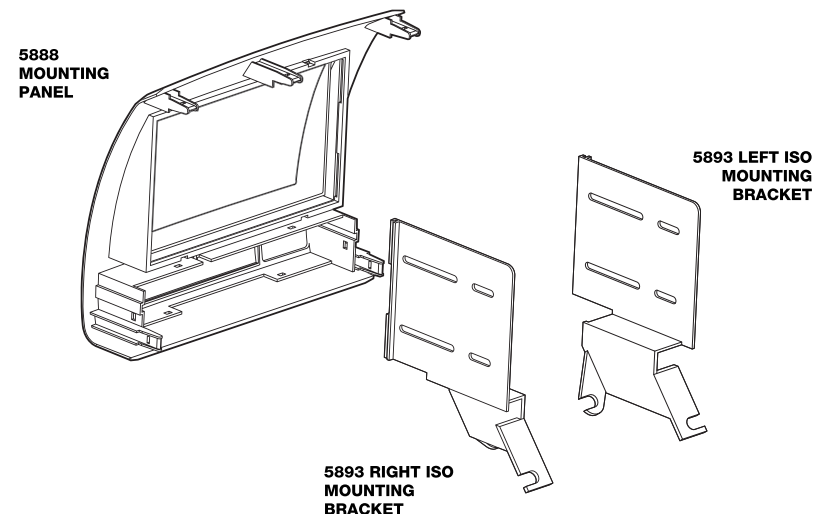

NOTE:

REAR SUPPORT AVAILABLE SEPARATELY. REAR SUPPORTING THE STEREO ADDS TO THE INSTALLATION'S STRUCTURAL INTEGRITY.

B. HAZARD / CLOCK DISPLAY REMOVAL INSTRUCTIONS AND REATTACHMENT

1. Remove the (2) small Phillips screws from each side of the factory radio that secure the radio to the rear of the radio face and pull the radio assembly away from the back of the face of the radio and set aside with the screws that were removed.
2. Using a small flat blade screwdriver, carefully remove the hazard/ clock display panel by prying the thin plastic strip from around the instrument housing outward to release the hazard / clock display from the housing. There are (2) retaining snaps on the top side and the bottom side and (1) on each edge.
3. Once the module is removed, carefully remove all plastic mounting clips from the factory panel and reattach them to the corresponding mounting clips on the 5888 panel.
4. Slide the hazard/ clock display panel into the housing on the 5888 panel until it snaps and locks into place.