

2004-UP SCION xA

RADIO REMOVAL:

NOTE: The factory provision for this car is a DOUBLE DIN/ISO radio.

1. Pull air conditioning knobs off. Remove two (2) Philip screws from behind knobs.
2. Remove two (2) silver narrow panels from sides of ashtray and pocket using panel removal tool.
3. Remove two (2) Philip screws from behind.
4. Using panel removal tool pop out lower radio bezel and hinge up on dash bezel to remove.
5. Remove four (4) Philip screws from radio, disconnect and remove.

2004-UP SCION xB

RADIO REMOVAL:

NOTE: The factory provision for this car is a DOUBLE DIN/ISO radio.

1. Pull off air conditioning knobs using Philip screwdriver. Extract two (2) Philip screws from A/C controls.
2. Using panel removal tool, pop out lower portion of dash bezel then hinge outward to release.
3. Extract four (4) Philip head screws from radio, then disconnect and remove.

2000-UP TOYOTA Celica

RADIO REMOVAL:

NOTE: The factory provision for this car is a DOUBLE DIN/ISO radio.

1. Remove shift knob and ashtray.
2. Unsnap shifter and ashtray bezel, unplug, lift away and remove.
3. Extract two (2) Philip screws from bottom of temperature control panel.
4. Remove temperature control knobs and extract (1) Philip screw from behind each knob. Remove circulation slider.
5. Unsnap radio bezel, unplug, lift away and remove.

2000-UP TOYOTA Echo

RADIO REMOVAL:

NOTE: The factory provision for this car is a DOUBLE DIN/ISO radio.

1. Remove left and right air conditioning control knobs and extract (2) #2 Philip screws from behind.
2. Using panel removal tool, remove top air conditioning panel, and extract (2) #2 Philip screws holding top brackets of radio.
3. Release air conditioning bracket from left to right side by pressing together on tabs. (**NOTE:** You do not have to disconnect, just remove it out of the way of radio bracket.)
4. Remove ashtray.
5. Using panel removal tool, carefully pry radio trim bezel towards you.
6. Extract (2) #2 screws from ashtray location.
7. Carefully disconnect and remove radio.

2001-UP TOYOTA Highlander

RADIO REMOVAL:

NOTE: The factory provision for this car is a DOUBLE DIN/ISO radio.

1. Using panel removal tool, remove trim around radio and climate control bracket that holds the A/C vents .
2. Remove the 10mm bolts holding the radio and climate control bracket. Disconnect and remove.

2000-UP TOYOTA MR2 Spyder

RADIO REMOVAL:

NOTE: The factory provision for this car is a DOUBLE DIN/ISO radio.

1. Use panel removal tool to remove left and right plastic side panels, extract (2) Philip screws from behind each panel.
2. Remove climate control knobs and extract (2) Philip screws.
3. Remove radio trim bezel.
4. Remove ashtray and extract (1) 10mm bolt on the right side, carefully pry out ashtray trim bezel.
5. Extract (4) Philip screws securing the radio, disconnect and remove from dash.

2001-03 TOYOTA RAV4

RADIO REMOVAL:

NOTE: The factory provision for this car is a DOUBLE DIN/ISO radio.

1. Extract (4) 5mm hex screws from radio trim bezel and pry off using panel removal tool.
2. Extract (4) 10mm bolts securing radio, pull away, disconnect and remove.

2004-UP TOYOTA RAV4

RADIO REMOVAL:

NOTE: The factory provision for this car is a DOUBLE DIN/ISO radio.

1. Using a panel removal tool, remove the side trim along the sides of the radio and climate controls.
2. Remove four (4) 10mm bolts securing radio to dash. Disconnect and remove.

SCOSCHE®

TA1465B

IN-DASH INSTALLATION KIT FOR 2000-UP SCION/TOYOTA DBL DIN KIT

SCION

2003-UP xA

2003-UP xB

TOYOTA

2000-UP CELICA


2000-UP ECHO

2003-UP HIGHLANDER


2000-UP MR2 SPYDER

2001-03 RAV4

2004-UP RAV4



5585L
BRACKETS



5585R
BRACKETS

INTRODUCTION / PRELIMINARY

Thank you for purchasing the Scosche TA1465B Kit. This kit was manufactured with the highest of quality standards.

NOTES:


- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

MOUNTING THE RADIO

DOUBLE DIN/2 STANDARD DIN RADIO INSTRUCTIONS

(DETACHABLE FACE/PULLOUT)

1. Bolt the right and left mounting brackets to either DOUBLE DIN radio or two STANDARD DIN head unit stacked.
2. Bolt the right and left TA1465 brackets to either DOUBLE DIN radio or two STANDARD DIN head unit stacked.
3. When kit panel is assembled with kit slide kit panel to radio opening and mount to complete.

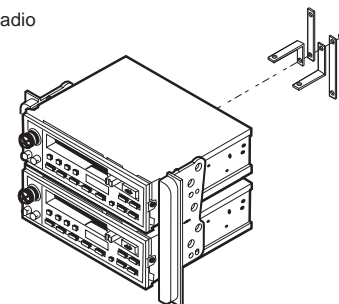

CAUTION:
REAR SUPPORT AVAILABLE
SEPARATELY. REAR
SUPPORTING THE RADIO ADDS
TO THE INSTALLATIONS
STRUCTURAL INTEGRITY.

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (TA1465B) in Select 2000-UP Scion/Toyota DBL DIN Kit. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.