


## IN-DASH DOUBLE DIN INSTALLATION KIT FOR 2008 SMART FORTWO PASSION/PURE

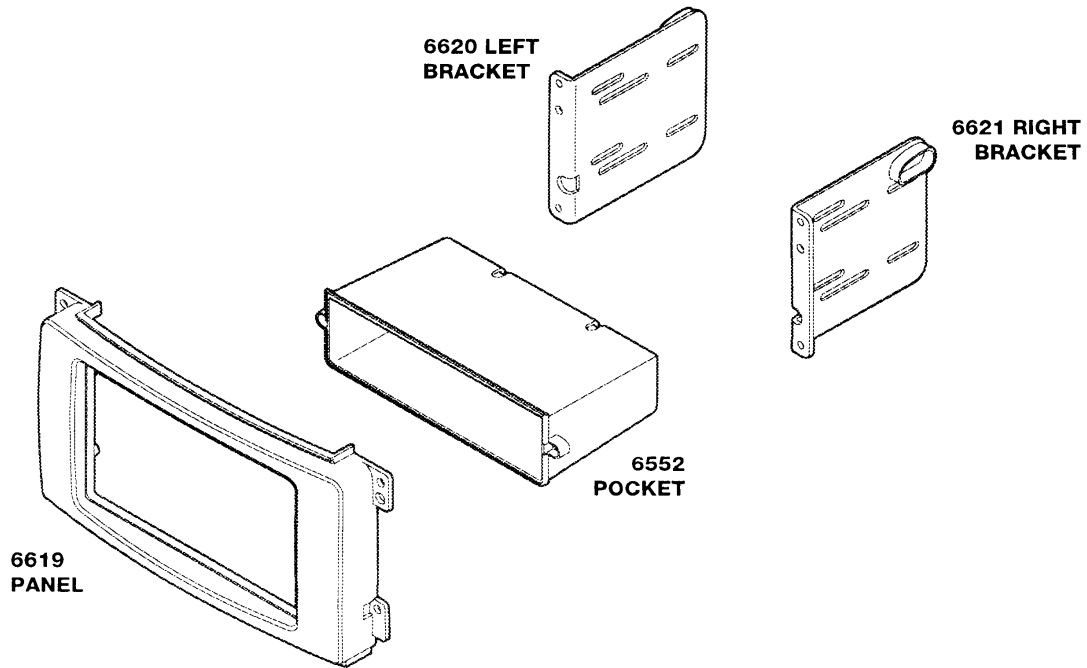

### INTRODUCTION/PRELIMINARY

This premium installation kit is for 2008 Smart Fortwo Passion/Pure vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

#### CAUTION

**DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.**

#### NOTES

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

### FACTORY WIRING CODES



For Factory Wiring Codes go to: **[www.scosche-cars.com](http://www.scosche-cars.com)**

#### CAR STEREO CONNECTORS

**PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.**

**VW01B**  
1986-Up Volkswagen

**VWAB**  
VW Antenna Adapter

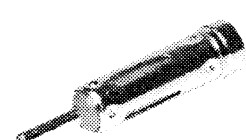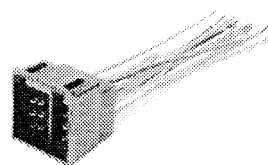

### LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (ST2430B) in 2008 Smart Fortwo Passion/Pure vehicles. Scosche Industries, Inc. cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.


If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

## FACTORY STEREO REMOVAL

### 2008 SMART FORTWO

1. Using a panel removal tool, unclip switch assembly from dash located directly below factory stereo.
2. Using T15 Torx driver, remove (1) screw that is located in the center of the opening that was covered by the switch assembly.
3. Using a panel removal tool, remove bezel that surrounds the factory stereo.
4. Using T15 Torx driver, remove (4) screws holding the stereo to the dash.
5. Disconnect plugs from the back of the stereo and remove.


## MOUNTING THE STEREO

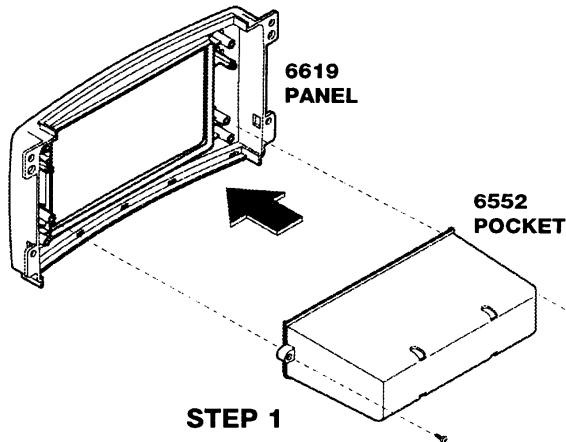

### DIN-ISO MOUNT

1. Mount 6552 pocket to 6619 panel using supplied screws (see left).
2. Attach 6620 & 6621 mounting brackets to 6619 mounting panel using supplied screws (see below).
3. Align position and bolt the aftermarket Double Din head unit to the mounting brackets. Use hardware supplied with aftermarket stereo to secure the mounting brackets to the stereo (see below).

**Note:** If hardware is not supplied with aftermarket stereo use hardware from factory stereo.

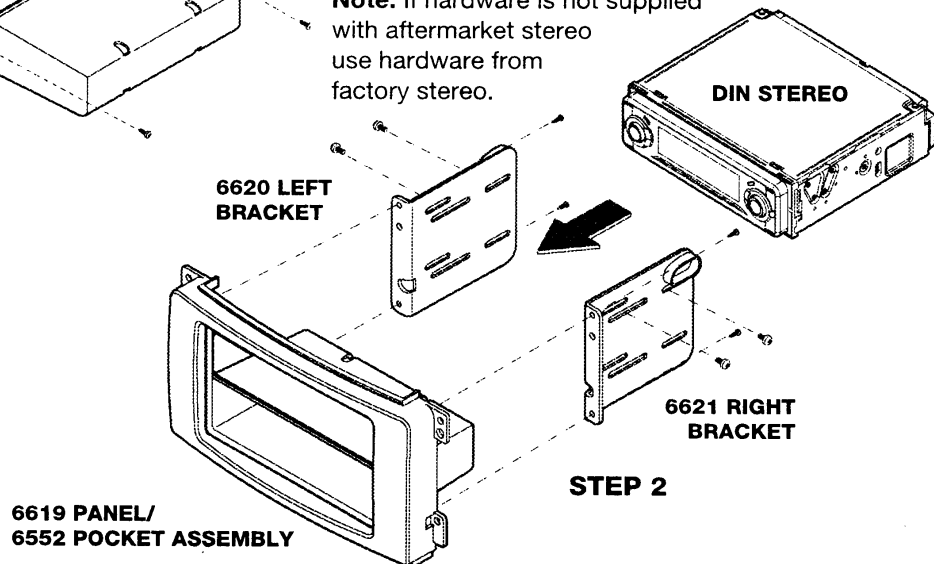

### DOUBLE DIN-ISO MOUNT

1. Attach 6620 & 6621 mounting brackets to 6619 mounting panel using supplied screws.
2. Align position and bolt the aftermarket Double Din head unit to the mounting brackets. Use hardware supplied with aftermarket stereo to secure the mounting brackets to the stereo.

**Note:** If hardware is not supplied with aftermarket stereo use hardware from factory stereo.

