

**PRODUCT FEATURES:**

- Adds a backup camera to the factory trunk handle.
- Selectable parking guide lines ON or OFF.
- With built-in trunk release switch.
- Maintains the OEM look.

**PARTS INCLUDED:**

1. Trunk handle camera
2. 20' extension cable



**INSTALLATION INSTRUCTIONS:**



1. Remove OE trunk handle and remove the OE trunk release switch.



2. Remove the 4 screws holding the CMB-15T camera.



3. Slide the camera from the back side of the OE trunk handle.




4. Position the CMB-15T base to OE trunk handle and align the screw holes.





5. Secure the CMB-15T to the OE trunk handle using the OE screws.

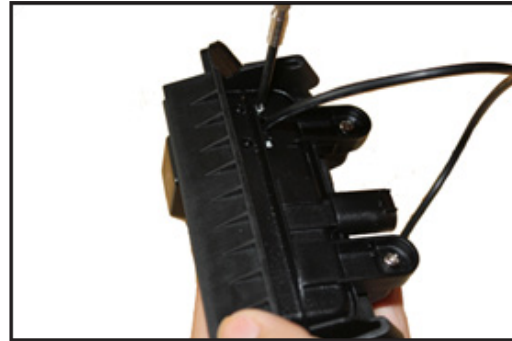


6. Put the camera back to the CMB-15T base and secure using the 4 screws.

7. Run the camera cable to the inside of the cabin towards the radio.

8. Make the power and video connections to the RVC interface or the aftermarket radio.

9. Test the camera for functionality.

10. Snap in the new trunk handle.

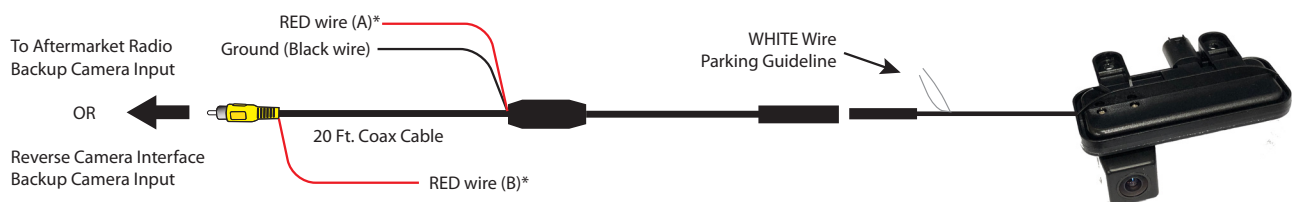

**\*NOTE:** To power the camera, use RED Wire A or B. If tapping power from the radio or RVC Interface, make sure to insulate RED Wire A to avoid it from shorting. If you will be tapping power from the reverse light +12V, insulate RED Wire B to avoid it from shorting. With either connection the Black GROUND wire needs to be connected to a solid chassis ground. For vehicles with manual transmission, we recommend tapping +12V power from the reverse light.

**WHITE Wire:** Connect to show parking guide line. Disconnect to remove. Insulate with tape to avoid from shorting.

**Note:** Cycle the camera power after connecting or disconnecting the control wire.

## VEHICLE APPLICATIONS:

### MERCEDES BENZ

2013 - 2017 CLA Class

