

PRODUCT FEATURES:

- Installs at the factory backup camera knockout. No need to drill a hole.
- Selectable Parking Guide Line ON or OFF.
- Maintains the OEM look.


PARTS INCLUDED:

1. Snap-in camera
2. 20" extension cable



INSTALLATION INSTRUCTIONS:

1. Remove the factory camera knockout.
2. Run the camera cable through the knockout hole and run it to the inside of the cabin towards the radio.
4. Make the power and video connections to the RVC interface or the aftermarket radio.
5. Test the camera for functionality before installing the new camera.

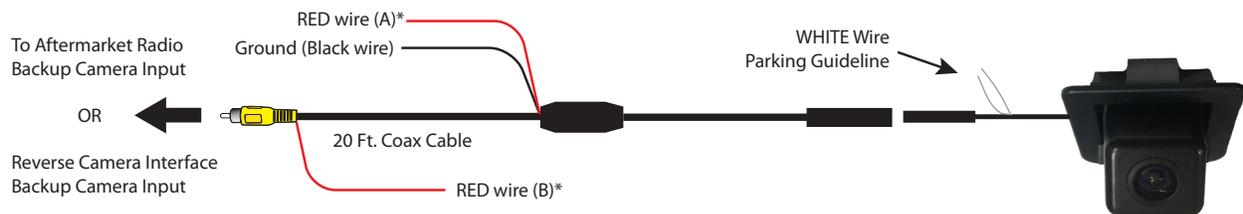

***NOTE:** To power the camera, use RED Wire A or B. If tapping power from the radio or RVC Interface, make sure to insulate RED Wire A to avoid it from shorting. If you will be tapping power from the reverse light +12V, insulate RED Wire B to avoid it from shorting. With either connection the Black GROUND wire needs to be connected to a solid chassis ground. For vehicles with manual transmission, we recommend tapping +12V power from the reverse light.

WHITE Wire: Connect to show parking guide line. Disconnect to remove. Insulate with tape to avoid from shorting.

Note: Cycle the camera power after connecting or disconnecting the control wire.

VEHICLE APPLICATIONS:

MERCEDES BENZ

2007 - 2013 CL Class

2010 - 2013 S Class

