


PRODUCT FEATURES:

- Adds a reverse camera input, 6 video plus 1 audio/video inputs.
- Uses the steering wheel controls buttons to toggle between the sources.
- Turn signals automatically triggers the corresponding side camera.
- Turn signal camera trigger can be turned on or off by using the SWC button.


PARTS INCLUDED:



RFM-WR1 Module

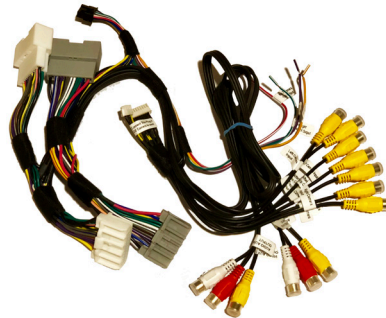

RFM-WR1 Harness

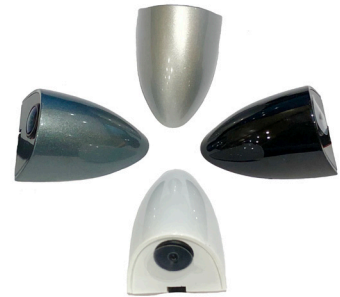

CSV-01 Fender Mount Camera
 (Available in Black, Charcoal Gray, Silver & White)

OPTIONAL ADD-ON CAMERAS:

Optional add on cameras are available to complete the multi-view capability of the RFM-WR1 Jeep Wrangler Multi Cam Integration Interface. Cameras available and ***sold separately*** include:



Jeep Wrangle Spare Tire
 Mount Camera



CCH-01W License Plate
 Mount Camera



CUB-15 Adjustable Angle Side
 Camera



CFF-01 Bullet Type Front Camera




CFF-02 Square Body Front Camera



CFF-03 Grille Mount Front Camera



INSTALLATION DIAGRAM:

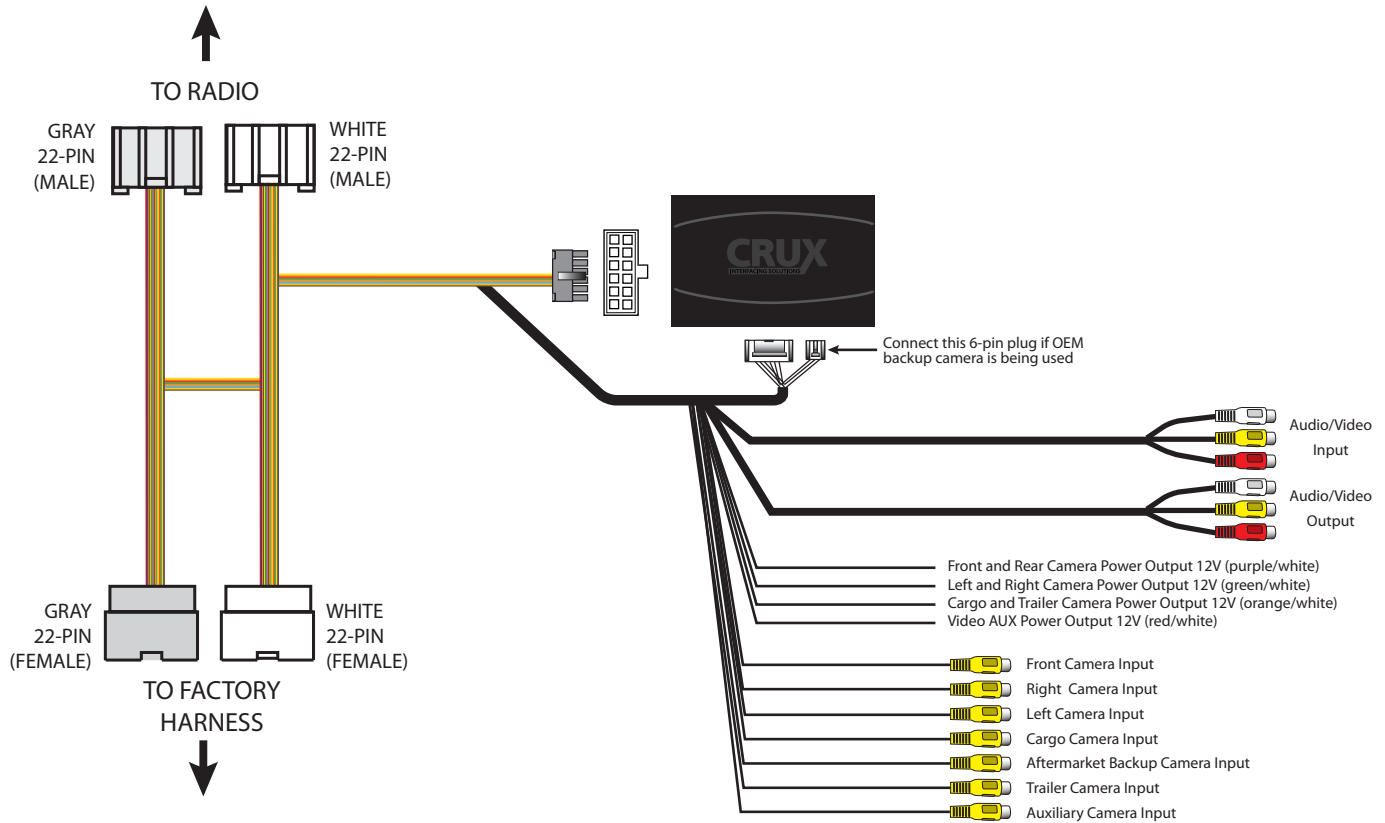

DIP SWITCH SETTINGS:

DIP#	ON	OFF
1	No Function – Leave OFF	
2	Front Camera ON	Front Camera OFF
3	Left Camera ON	Left Camera OFF
4	Right Camera ON	Right Camera OFF
5	Cargo Camera ON	Cargo Camera OFF
6	Trailer Camera ON	Trailer Camera OFF
7	AUX A/V ON	AUX A/V OFF
8	Set to ON	



INSTALLATION INSTRUCTIONS:

Installation example is on a 2016 Jeep Wrangler.



1. Remove the rubber lining on the compartment on the dashboard. Remove one screw.



2. Carefully pry out the power window switch assembly.



3. Unplug the power window switch connector.



4. Remove the screw behind the power window switch housing.



5. Remove the lower panel under the steering wheel column.



6. Remove the screw holding the upper dash trim panel.






7. Raise the upper dash panel to release the radio bezel.




8. Carefully pull out the radio bezel and set aside.




9. Remove the 4 screws holding the radio.

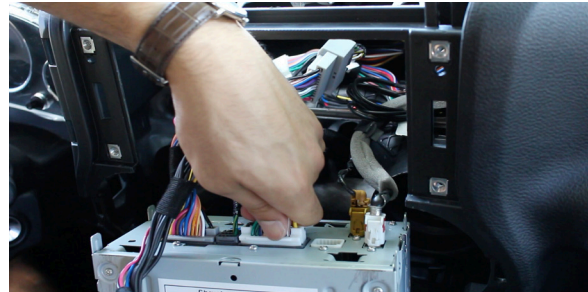

10. Pull out the radio and unplug the OEM connectors.

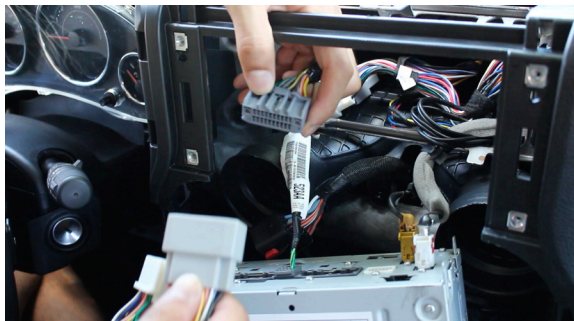


11. Plug in the RFM-WR1 T-harness between the radio and vehicle harness.

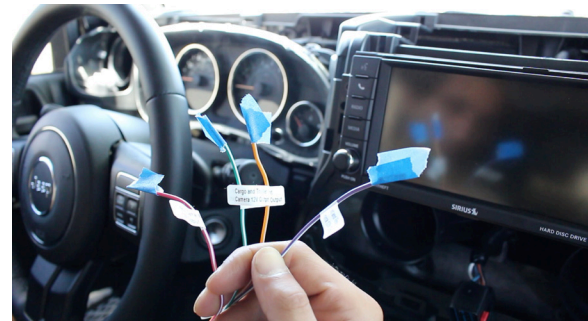

12. Plug the camera cables and connect the corresponding camera power output wires.

13. Mount the CSV-01 fender mount side camera and other cameras being used and tuck the module and the harness behind the radio. Clean the area where the CSV-01S fender mount camera will be installed with alcohol wipe. Reverse the process to reinstall the radio and trim panels.

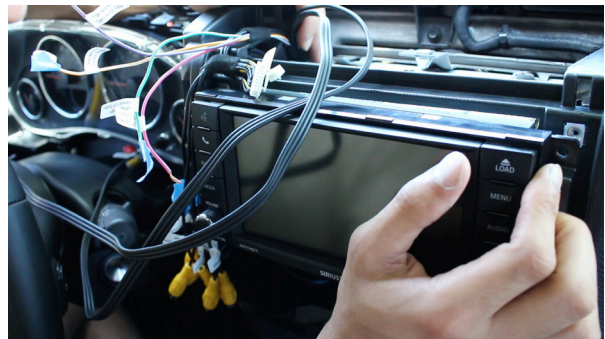



14. To force view and toggle between the cameras, press and hold the middle button on the right side steering wheel control. Each press will toggle to the camera that is set to ON on the DIP switches. See page 2 for DIP switch settings.



15. To turn off the automatic triggering of the side mirror cameras, move the turn signal switch to the camera to be turned off and press the left side SWC middle button for 3-5 seconds. Repeat the process to turn it back on.



CSV-01 Fender mount side view camera



Driver side blind spot view



Front View

To enter AV mode, press and hold the left side steering wheel control center button for 5 seconds then press "View Video" on the screen.



Back up View

VEHICLE APPLICATIONS:

JEEP

2007 - 2017 Wrangler

