

CHEVROLET EXPRESS & GMC Savana Van 2003-2018

PRODUCT FEATURES:

- Replaces the factory third brake light to maintains the OEM look.
- LED brake lights included.
- 6 Infra Red LEDs for night time use.
- With built-in Microphone.
- Uses 4-pin aviation type water resistant connectors.

PARTS INCLUDED:


- 1. Third Brake Light camera
- 2. 33' extension cable
- 3. Power connection cable X2
- 4. 4-pin aviation connector to RCA adapter
- 5. Male to Male RCA adapter





INSTALLATION INSTRUCTIONS:

- 1. Remove the factory third brake light.
- 2. Plug the 4-pin aviation connector of the extension cable to the camera cable.
- 3. Connect the red and black wire from the CCV-01X camera to the factory brake light wiring.
- 4. Run the extension cable provided towards the radio.
- 5. Make the power and video connections at the radio. Power the camera using the camera power output provided by the RVC interface or connect to the factory backup light wire.
- 6. Test the camera prior to installing the CCV-01X third brake light.
- 7. Adjust the camera angle as necessary.

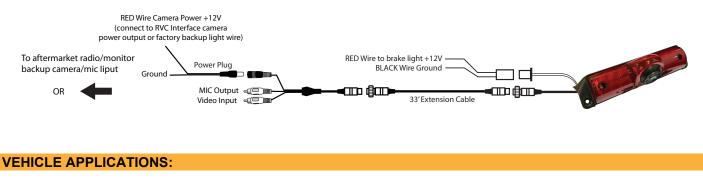

CHEVROLET		GMC	
2003 - 2018	Express Van	2003 - 2018	Savana



1

rev.061219